

**LURPAK'S**

**VIDEOPAC €7000**

**ONLINE**

# VIDEOPAC COMPUTER G7000


Instructions for Use  
Gebrauchsanleitung-  
Mode d'emploi

Gebruiksaanwijzing  
Istruzioni d'uso  
Brugsanvisning

Bruksanvisning  
Käyttöohje  
Modo de empleo

**PHILIPS**





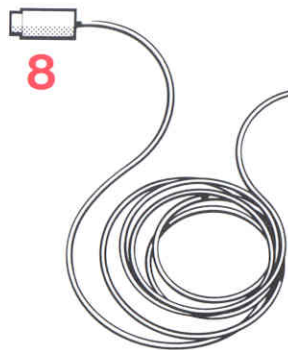


3



1

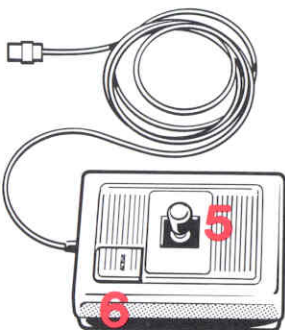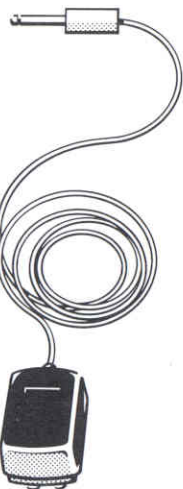

6

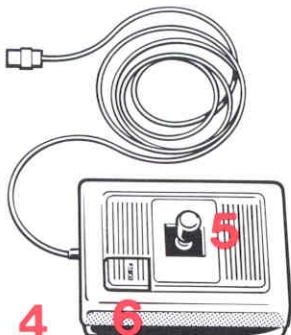

4

6

**ENGLISH**

1. Keyboard
2. Slot for Videopac
3. Videopac
4. Handsets
5. Joystick
6. Action button
7. Mains lead and adapter (adapter supplied in UK may differ from that shown).
8. Output connector

**DEUTSCH**

1. Grundgerät mit Tastatur
2. Schlitz für die Videopac-Cassette
3. Videopac-Cassette
4. Bedienungskästchen
5. Spielhebel
6. Befehlsknopf
7. Netzteil und Verbindungskabel
8. Antennen-Anschluß

**NEDERLANDS | FRANÇAIS**

1. Pupitre
2. Logement de la cartouche Videopac
3. Cartouche Videopac
4. Boîtiers de commande
5. Manche à balai
6. Touche activation
7. Bloc d'alimentation secteur
8. Câble de liaison au téléviseur

**ITALIANO**

1. Tastiera
2. Alloggio per Videopac
3. Videopac
4. Telecomandi
5. Leva di comando
6. Tasto d'azione
7. Alimentatore
8. Cavo coassiale

**DANSK**

1. Tastatur
2. Kasetteåbning (indsats for Videopac)
3. Videopac
4. Fjernbetjeningsenheder
5. Styrekontrol (styrepind)
6. Start/stop knap
7. Netkabel og strømforsyner
8. Antennekabel og -stik

**SVENSKA**

1. Tangentbord
2. Uttag för Videopac
3. Videopackassett
4. Köraggregat
5. Styrspak
6. Aktionsknapp
7. Nätsladd med nätadapter
8. Utgångskontakt

**SUOMI**

1. Näppäimistö
2. Videopacin paikka
3. Videopac-kasetti
4. Ohjauksyksiköt
5. Ohjausvipu
6. Kytkin
7. Verkkojohto ja verkkolaite
8. Liitäntäpiste

**ESPAÑOL**

1. Teclado
2. Ranura para el Videopac
3. Videopac
4. Aparatos de mano
5. Palanca de rötula
6. Botón accionador
7. Cable de red y adaptador
8. Conector de salida

---

Philips Videopac Computer  
G7000 - baseret på  
microprocesserteknologi -  
byder på underholdning,  
spænding og undervisning.  
Instruktionerne på, hvordan den

opstilles og anvendes hjemme  
hos Dem, er givet på side 15.

---

Det mikroprocessorbaserade  
TV-spelet Philips Videopac  
Computer G7000 är roande,  
underhållande och lärorikt.  
Anvisningar om hur det kopplas  
upp och ansluts finns på sidan  
17.

---

Mikroprosessoriin perustuva  
Philipsin Videopac Computer  
G7000 viihdyttää, luo jännitysä  
ja opettaa. Asennusohjeet on  
annettu sivulla 19.

---

El Videopac Computer Philips  
G7000, basado en  
microprocesador, proporciona  
entretenimiento, estímulo y  
formación. Las instrucciones  
para montarlo en su casa se  
dan en la página 21.

---

DANSK


SVENSKA

SUOMI

ESPAÑOL


1

Connect handsets and mains adapter to keyboard.  
Connect a mains plug to the wires from the adapter.

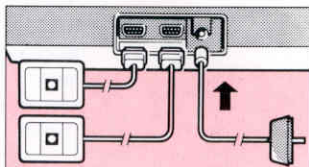


2

Remove aerial plug from TV set and replace it by output connector of Videopac Computer. (If the connector does not fit, get an adapter from your dealer). Connect keyboard to mains supply.

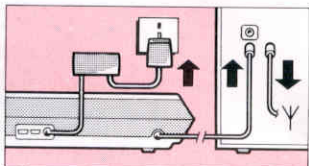

3

Switch on TV set and allow it to warm up.  
Reserve one of your TV programme-selectors for the Videopac Computer.  
Press this preselector.

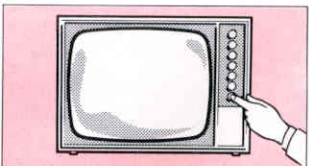


**Notes**

A Videopac contains sophisticated electronics and must be treated carefully. Always replace a Videopac in its box when not in use.  
The Videopac Computer is only switched off when the mains plug is removed.  
If a Videopac does not perform satisfactorily return both the Videopac and the Videopac Computer to your dealer.  
If the same picture is displayed continuously on a TV for several hours, the screen may suffer damage.

**Specifications**

- Programmable video system based on general-purpose microprocessor.
- Full alphanumeric keyboard (48 keys) and two joystick controls.
- Computer accessories meet all European safety standards.
- Realistic sound. Volume adjustable on TV set.
- Eight colours, each with two brightness levels.
- Up to 4k directly-addressable memory.

4 Insert a Videopac into slot in keyboard as shown. Press it down firmly.

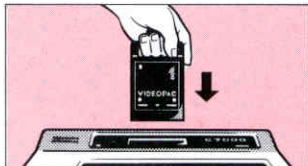

5 Tune the TV preselector on UHF Channel 32 (approx) until a picture is displayed.

6 Touch RESET ( $\Delta$ ). 'SELECT GAME' is displayed in colour. Adjust volume control on TV set. Refer now to the Instructions for Use of the Videopac that has been inserted.

